



Tellur Electra Bluetooth Speaker User manual

Thank you for choosing a Tellur product. The Electra Bluetooth speaker has a trendy design, powerful functions and high compatibility - giving you the freedom to listen your favourite music and even have long discussions over the phone with your dear ones.

1

Components & Functions



2

1. BLUETOOTH MODE

1.1 Bluetooth version: V4.2. Supports HSP, HFP, A2DP, AVRCP protocol, English voice reminder, the Bluetooth pairing name "Electra".
1.2 Toggle the ON/OFF button to turn on the machine, then blue color Bluetooth LED indicator will light on, with notification voice to show you that Bluetooth is ready.

BLUETOOTH LED light flash by 100ms speed, use your mobile phone searching "Electra" name, then connect and pair it. After connected, the blue LED indicator light will be on and the paired notification sound will be heard. When music is playing, the blue LED indicator light flash slowly by a 1000ms speed. When smartphone paired this device again, it will connect automatically.

1.3 When music played by Bluetooth mode, you can pick up your incoming call, speaker will stop play music and will enter voice call mode automatically.
1.4 When you disconnect the Bluetooth, there is notification sound and the speaker will enter in searching mode.

1.5 Long press of the volume "+/-" button to turn up and down the volume. Short press for Next / Previous.

2. MicroSD CARD MODE

2.1 Turn on the speaker. It will enter Bluetooth mode automatically if it is without the microSD card inserted, when the microSD card inserted, speaker will check and enter microSD card play mode automatically. If the microSD card was inserted on device, then when your turn on the speaker, it will enter the microSD CARD mode directly.

2.2 When playing music, the blue LED light will be on and flash slowly by 1000ms speed. When it was paused LED light will stop flashing.

3

2.3 Unplug the microSD card will enter FM mode by default, if you need other function please switch mode.

3. USB STICK MODE

3.1 Turn on the speaker. It will enter Bluetooth mode automatically, if it is without the USB stick inserted. When insert the USB stick, the speaker will enter USB stick play mode automatically. If before turning on the speaker, the USB stick was inserted, then speaker will enter USB stick mode directly.

3.2 When playing music, the blue LED light will be on flash slowly by 1000ms speed, when pause the speaker, LED light will stop flashing.

3.3 Unplug the USB stick will enter FM mode by default, if you need other function please switch mode.

4. AUX IN MODE

4.1 Connect the speaker by 3.5mm stereo cable, manual switch into AUX mode, then use your smartphone or other connected device to play music.

4.2 When playing music, the blue LED light will be on and flash slowly by 1000ms speed, when pause the speaker, the LED light will stop flashing.

4.3 When playing music, long press of the volume "+/-" button to turn up and down the volume. Short press for Next / Previous.

4.4 Unplug the audio line will enter FM mode by default.

4

Switch to the wanted mode if you need other functions

5. FM MODE

5.1 When switch to FM mode, please insert the line-in cable as the antenna. When listening the FM, you can press the play button to enter the automatically searching channel mode.

5.2 After the searched channel is saved, short press the "+ -" button to adjust the up and down radio, and long press the "+ -" button to adjust the volume.

5.3 In radio mode, if you want to operate "Bluetooth" "AUX function", please press the mode button to switch mode. The microSD card and USB stick inserted are by default detected to enter the microSD card and USB disk play.

6. CHARGING

6.1 Use the micro USB power cable to connect the speaker and PC or 5V adaptor, then it will start to charge, the red LED indicator will light on.

6.2 When charge is full, the red LED indicator will turn off.

7. LOW POWER PROTECTION

7.1 When battery power is lower than 3.3V over than 15s, there is a warning sound, and then speaker will POWER OFF automatically.

5


Button functions sheet

No.	BUTTON	MODE			
		BLUETOOTH	microSD CARD / U DISK	AUX	FM
1	PLAY/STOP/HANDS FREE CALL	SHORT PRESS PLAY/STOP/HANDS FREE CALL	SHORT PRESS PLAY/STOP	SHORT PRESS PLAY/STOP	SHORT PRESS ENTER FM SEARCHING AUTOMATICALLY
2	NEXT/VOLUME+	SHORT PRESS NEXT/LONG PRSS VOLUME+	SHORT PRESS NEXT/ LONG PRSS VOLUME+	SHORT PRESS INVALID / LONG PRESS VOLUME+	SHORT PRESS SWITCH CHANNEL/ LONG PRESS VOLUME +
3	PREVIOUS /VOLUME-	SHORT PRESS PREVIOUS/LONG PRSS VOLUME-	SHORT PRESS PREVIOUS /LONG PRESS VOLUME-	LONG PRESS VOLUME-	SHORT PRESS SWITCH CHANNEL/ LONG PRESS VOLUME-
4	SWITCHING MODE	SHORT PRESS FOR SWITCHING MODE			
5	POWER ON/OFF	POWER ON/OFF			

6

SPECIFICATIONS

1. Output Power: 5W x 2
2. Speaker size: 45mm x 2
3. Impedance: 4 Ohm
4. Battery: 3.7V 2200mAh
5. Charging voltage: DC 5V
6. Frequency Response: 90Hz-20KHz
7. Product size: 180 (L) x 55(W) x 77.8(H)mm
8. Weight: 0.369kg
9. Accessories: speaker/manual/AUX IN cable/USB cable

 If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)



7

ABN Systems International

Str. Marinarii, nr.29
Sector 1, Bucuresti, Romania

004.021.233.09.95

office@tellur.com

office@abnsystems.ro

www.tellur.com