

Tellur® 3 in 1 Power Bank - 10,000 mAh

Thank you for purchasing Tellur mobile power bank, please read the instructions before use, to let you understanding all of its function and quick operation.

● Product scope of application

This product model is suitable for all kinds of brand mobile phone and tablet, digital cameras, portable gaming consoles, etc

● Product overview

1. This product has a built-in 3.7/10,000 mAh, high-quality lithium polymer batteries.
2. Four white leds accurately display the battery's remaining power.
3. Please gently press the start switch on the side of the power bank, normally, the power bank activates itself when a mobile phone or any other device is connected and it starts charging.
4. The product structure is compact, unique, waved and beautiful. The surface is made of ABS and PC, created for a comfortable feeling.

● Mobile power function description

*** The configuration of the four power lights:


-The switch operation: Press the switch to turn on the power bank, long press (2 sec.) for power off.

-If no device is connected and being charged for 30 seconds, than the power bank will shut down.

-Charging status (of PB) -> While charging, the LED lights will be displayed, one by one, accordingly to the table on the right page.

-Discharge status (of PB) -> If the uploaded current is less than 40mAh, the LED lights on the PB will automatically turn off in about 30 seconds, to enter stand-by mode.

● Operation schematic diagram

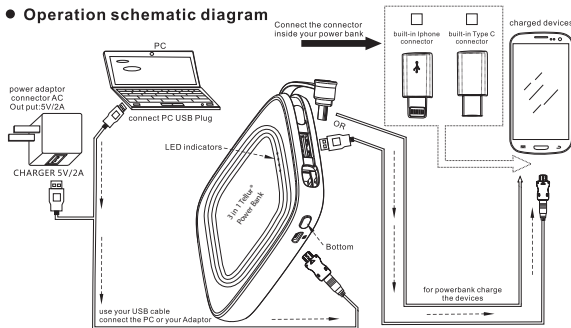

For this model, (below we call "product" as brief), have two kind of built-in cable for available (Micro only and Micro/Iphone two in one); As the picture showing is Android devices (just reference); if this product you are owning is built-in Micro only cable, please connect the way which suitable to your devices; If this product you are owning is built-in Micro/Iphone two in one cable, please connect the side to your devices. Whichever way you choose for connect (through built-in cable directly or through connector), this product will always charge your devices automatically. Please remember pay attention to use this product according to our manual-

Charging display shows: ☐ Light On ☒ Light Out ☐ Light Flash

Power	LED1(Power25%)	LED1(Power50%)	LED1(Power75%)	LED1(Power100%)
Charging Indicator				
<25%Power				
<50%Power				
<75%Power				
<100%Power				
100%Power				
Discharging Indicator				
25%Power				
50%Power				
75%Power				
100%Power				

● Common problems and solutions

1. Please check whether the power adapter cable joint is normal and integral. We suggest to use only qualified, branded power adaptors and cables for charging the PB.
2. If the power supply capacity is too low, please recharge. Remember to always check the device that needs to be charged battery, for compliance with the PB.
3. If not charging, please check the connector plug for any objects that may have got into it (dust, etc)
4. If the PB was not used for a long period of time (more than 2 months) please recharge before use.

● Warning Notes

1. If long time passes without charging, please recharge (it needs to be recharged at least once every 6 months).
2. While being uses, the PB may heat up to 40 degrees Celsius. This is a normal phenomenon, not a failure of the device.
3. Please keep the device in a dry environment, fully dried, away from sunlight and do not wash with water or any abundant liquids. (Use only a moist, soft cloth)
4. Take good care of the environment. The PB must be disposed of according to the designated places for recycling that authorities have installed

⚠ Important note

1. Do not let children play with the PB. They can handle it only with responsible, safe supervision from adults, and under the adult's guidance.
2. Do not break, tear apart, throw in fire. Do not use collisions to another hard material to remove the fitting or the wading. This may short-circuit the device and may cause failures, or even worse, fires or accidents.

TELLUR INTERNATIONAL SRL
Str. MARINARILOR 31 București

Tel: 021.233.09.95

office@tellur.ro

www.tellur.ro